




I-9315 Corner Grinder

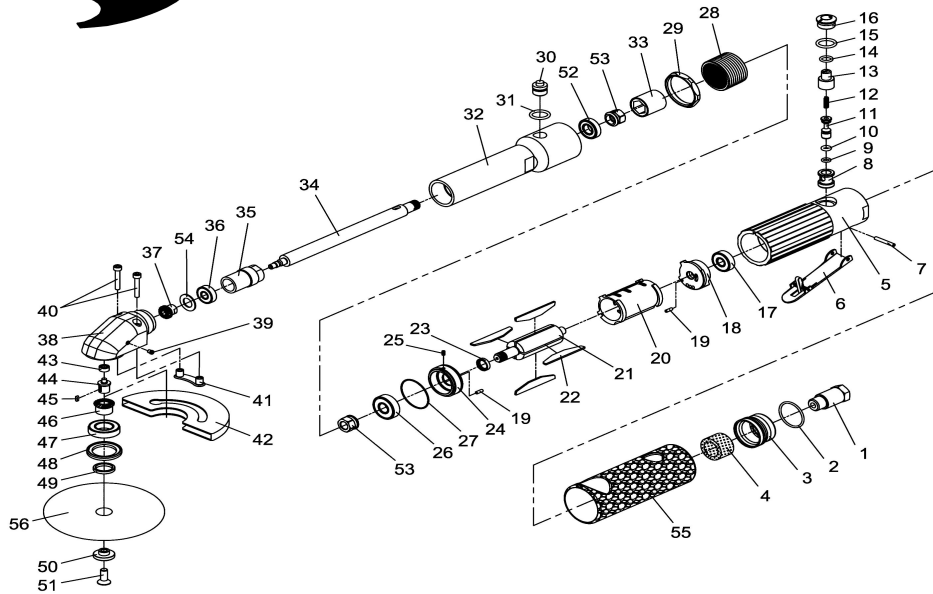

Ref. No.	Part No.	Description	Q'ty /Tool	Ref. No.	Part No.	Description	Q'ty /Tool
1	SPI9315B001A	Air Inlet (1/4"PF)	1	30	SPI9315B030	Lock Button	1
	SPI9315B001B	Air Inlet (1/4"PT)		31	SPI9315B031	O-Ring	1
	SPI9315B001C	Air Inlet (1/4"NPT)		32	SPI9315B032	Drive Housing	1
2	SPI9315B002	O-Ring	1	33	SPI9315B033	Transfer Ring	1
3	SPI9315B003	Exhaust Deflector	1	34	SPI9315B034	Drive Shaft	1
4	SPI9315B004	Muffler Fiber	1	35	SPI9315B035	Bolt Screw	1
5	SPI9315B005	Motor Housing	1	36	SPI9315B036	Ball Bearing	1
6	SPI9315B006	Throttle Lever	1	37	SPI9315B037A	Pinion Gear	1
7	SPI9315B007	Throttle Lever Pin	1	38	SPI9315B038	Gear Housing	1
8	SPI9315B008	Valve Bushing	1	39	SPI9315B039	Grease Fitting	1
9	SPI9315B009	O-Ring	1	40	SPI9315B040	Screw	2
10	SPI9315B010	O-Ring	1	41	SPI9315B041	Cover Guide	1
11	SPI9315B011	Throttle Valve	1	42	SPI9315B042	Cover	1
12	SPI9315B012	Spring	1	43	SPI9315B043	Bearing	1
13	SPI9315B013	Air Regulator	1	44	SPI9315B044	Drive Shaft	1
14	SPI9315B014	O-Ring	1	45	SPI9315B045	Key	1
15	SPI9315B015	O-Ring	1	46	SPI9315B046	Bevel Gear	1
16	SPI9315B016	Valve Screw	1	47	SPI9315B047	Ball Bearing	1
17	SPI9315B017	Ball Bearing	1	48	SPI9315B048	Nut	1
18	SPI9315B018	Rear End Plate	1	49	SPI9315B049	Ring	1
19	SPI9315B019	Spring Pin	1	50	SPI9315B050	Flange	1
20	SPI9315B020	Cylinder	1	51	SPI9315B051	T-Screw	1
21	SPI9315B021	Rotor	1	52	SPI9315B052	Ball Bearing	1
22	SPI9315B022	Rotor Blade	4	53	SPI9315B053	Transfer Nut	2
23	SPI9315B023	Antilock Ring	1	54	SPI9315B054	Washer	1
24	SPI9315B024	Front End Plate	1	55	SPI9315BR055	Rubber (For I-9315BR)	1
25	SPI9315B025	Pin	1	56	ACI-9315C	Disc	1
26	SPI9315B026	Ball Bearing	1	RK	SPI9315B0RK	Repair Kit Ref. No.-- 17, 22(x4), 26, 36, 43, 47, 52, 58	
27	SPI9315B027	O-Ring	1				
28	SPI9315B028	Housing Screw	1	SK	SPI9315B0SK	Service Kit Ref. No.-- 2, 9, 10, 12, 14, 15, 27	
29	SPI9315B029	Lock Ring	1				